

Xerox Wide-Format Meter Reading Help

XEROX 3030 / 3040 / 3050

The meter is obtained by opening the right side door underneath the control panel.

Xerox 6204

Press the Machine Status button on the left side of the control panel. This will show 2 meters, linear feet and square feet.

Xerox 6604 / 6279

Press the Machine info button on the control panel. This will show 2 meters, linear feet and square feet.

XEROX 8825, 8830, 8850

The meter is accessed through the control panel by depressing pause then enter. Press the left arrow once to scroll to printer menu. Press enter again then left arrow once more to scroll to billing meters. Then press enter to get the A (square foot) reading then left arrow to get the B (linear foot) reading.

Xerox 510

The meter is accessed through the control panel on the print engine by depressing on/offline then enter. Press the previous button once to scroll to printer menu. Press enter again then previous once more to scroll to billing meters. Then press enter to get the A (square foot) reading then previous to get the B (linear foot) reading.